



# PARTS LIST

---


**DCL4000 SERIES**

- DCL4001
- DCL4002
- DCL4003
- DCL4004
- DCL4005
- DCL4006
- DCL4007
- DCL4008
- DCL4009
- DCL4010
- DCL4011
- DCL4012
- DCL4013
- DCL4014
- DCL4015
- DCL4016

---

PART # 634381  
NORCOLD 2/6/2019


**FRONT VIEW - DOOR AND CABINET PARTS - DCL4000 SERIES**

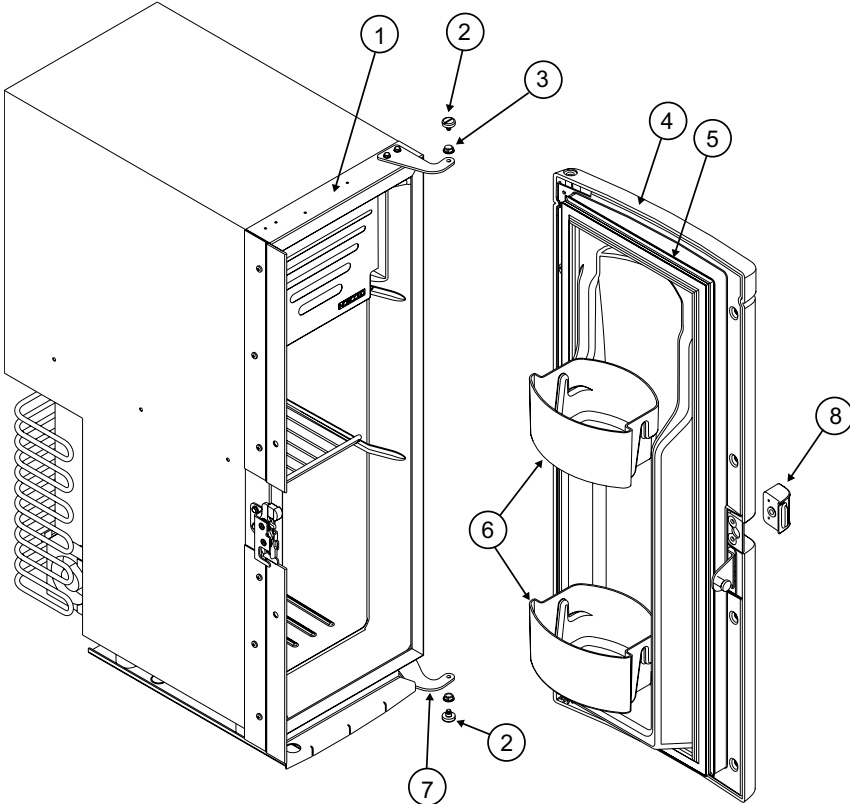

## FRONT VIEW - DOOR AND CABINET PARTS - DCL4000 SERIES


NO	PART #	DESCRIPTION	MODEL
1	3230 112 0040	FRAME-BREAKER-TOP	ALL
2	5055 036 0000	HINGE PIN	ALL
3	3041 128 0020	HINGE PLATE - UPPER	ALL
4	634357	DOOR ASSY-FOAMED-GRAY W/PALLADIUM (SILVER) TRIM	DCL4001
	634312	DOOR ASSY-FOAMED-TAN W/ PALLADIUM (SILVER) TRIM	DCL4002
	634313	DOOR ASSY-FOAMED-TAN W/ WOOD TRIM	DCL4003
	634314	DOOR ASSY-FOAMED-TAN W/ BRICK TRIM	DCL4004
	634315	DOOR ASSY-FOAMED-CHARCOAL W/BRUSHED SILVER TRIM	DCL4005
	634316	DOOR ASSY-FOAMED-CHARCOAL W/GALLOWAY BURLTRIM	DCL4006
	634317	DOOR ASSY-FOAMED-ANTHRACITE W/BRUSHED ALUMINUM TRIM	DCL4007
	634318	DOOR ASSY-FOAMED-MEDIUM WARM GRAY W/GRAY TRIM	DCL4008
	634319	DOOR ASSY-FOAMED-MEDIUM WARM GRAY W/BURL WOOD TRIM	DCL4009
	634320	DOOR ASSY-FOAMED-GRAY W/WOOD TRIM	DCL4010
	634321	DOOR ASSY-FOAMED-GRAY W/PALLADIUM (SILVER) TRIM	DCL4011
	634322	DOOR ASSY-GRAY W/ WOOD TRIM	DCL4012
	634899	DOOR ASSY-BROWN W/ DARK WOOD TRIM	DCL4013
	634897	DOOR ASSY-BROWN W/ LIGHT WOOD TRIM	DCL4014
	634900	DOOR ASSY-BROWN W/ DARK WOOD TRIM	DCL4015
	634898	DOOR ASSY-BROWN W/ LIGHT WOOD TRIM	DCL4016
	638162	DOOR COMPLETE WREN	DCL4017 DCL4017M6
638163	DOOR COMPLETE WREN EBONY	DC4018 DCL4018M6	
5	4148 036 0020	DOOR GASKET (USE 633768)	ALL
	633768	DOOR GASKET (USE 638821)	ALL
	638821	KIT SERVICE DOOR GASKET REPLACEMENT	ALL
6	4225 116 0030	DOOR BIN	ALL
7	3041 129 0020	HINGE PLATE - LOWER	ALL
8	634346	PUSHBUTTON ASSY-GRAY	DCL4011 DCL4012
	634347	PUSHBUTTON ASSY-MEDIUM GRAY	DCL4008 DCL4009
	634348	PUSHBUTTON ASSY-CHARCOAL	DCL4005 DCL4006
	634349	PUSHBUTTON ASSY-ANTHRACITE	DCL4007
	634350	PUSHBUTTON ASSY-GRAY-W/LONG HOUSING	DCL4001 DCL4010
	634351	PUSHBUTTON ASSY-TAN	DCL4002 DCL4003 DCL4004
	638172	PUSH BUTTON ASSY WREN	DCL4017 DCL4018
		PART IS NO LONGER AVAILABLE	

**FRONT VIEW - INNER CABINET PARTS - DCL4000 SERIES**

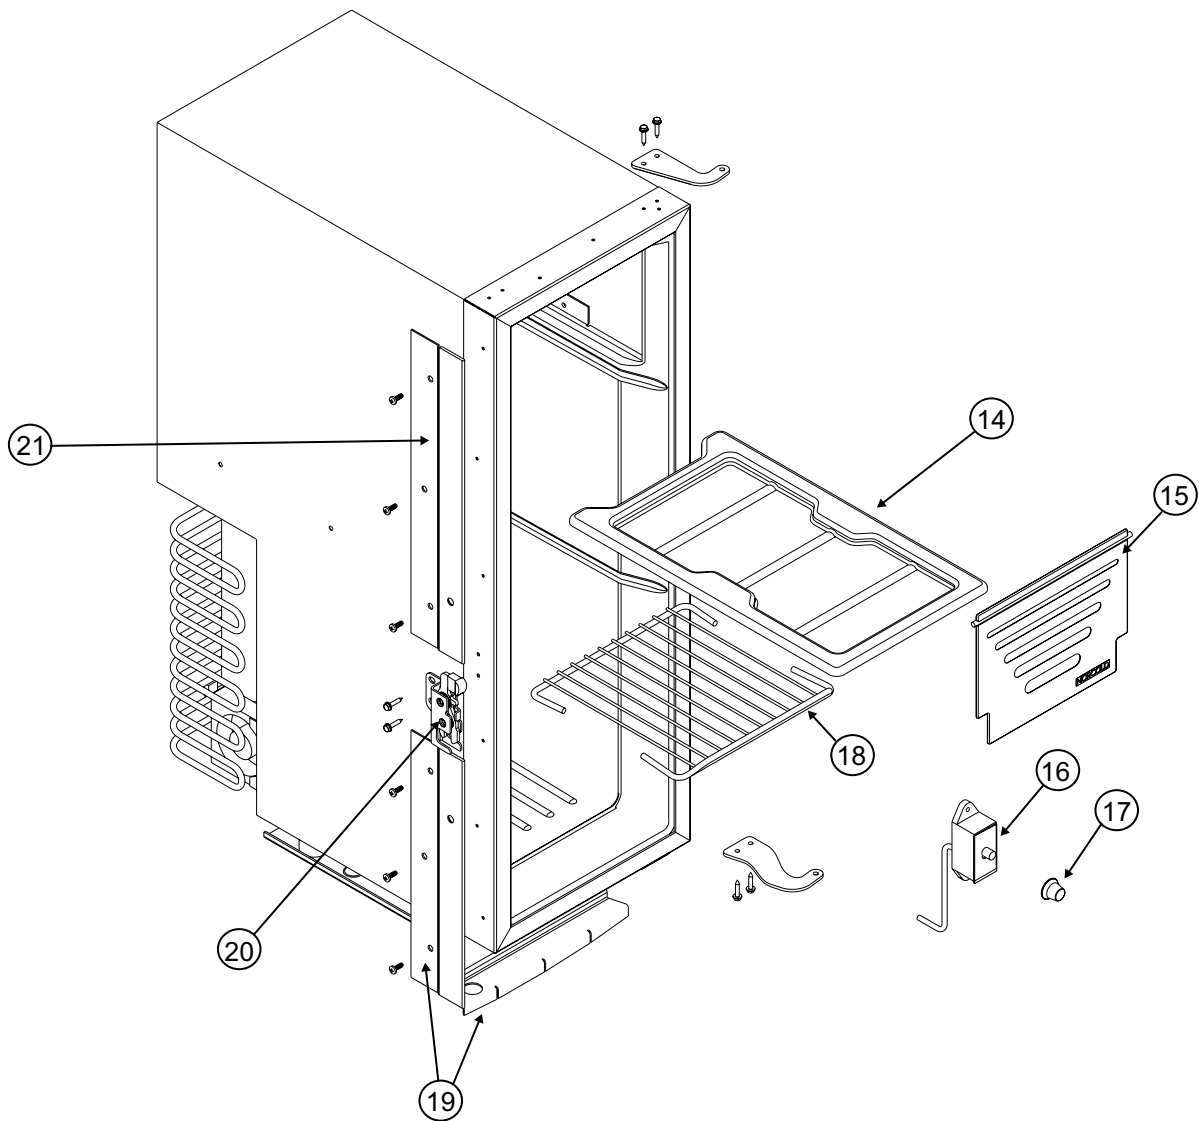

NO	PART #	DESCRIPTION	MODEL
14	633969	DRAINAGE PAN	ALL
15	4225 119 0020	FREEZER DOOR	ALL
16	634373	THERMOSTAT	ALL
17	61748722	KNOB-THERMOSTAT	ALL
18	5230 042 0020	SHELF	ALL
19	1609 462 0100	PLATE ASSEMBLY-TRIM-LOWER	ALL
20	633677	LATCH ASSY (USE 634921)	ALL
	634921	LATCH ASSY	ALL
21	3223 982 0100	PLATE-TRIM-UPPER	ALL
		PART IS NO LONGER AVAILABLE	

## REAR VIEW - DCL4000 SERIES

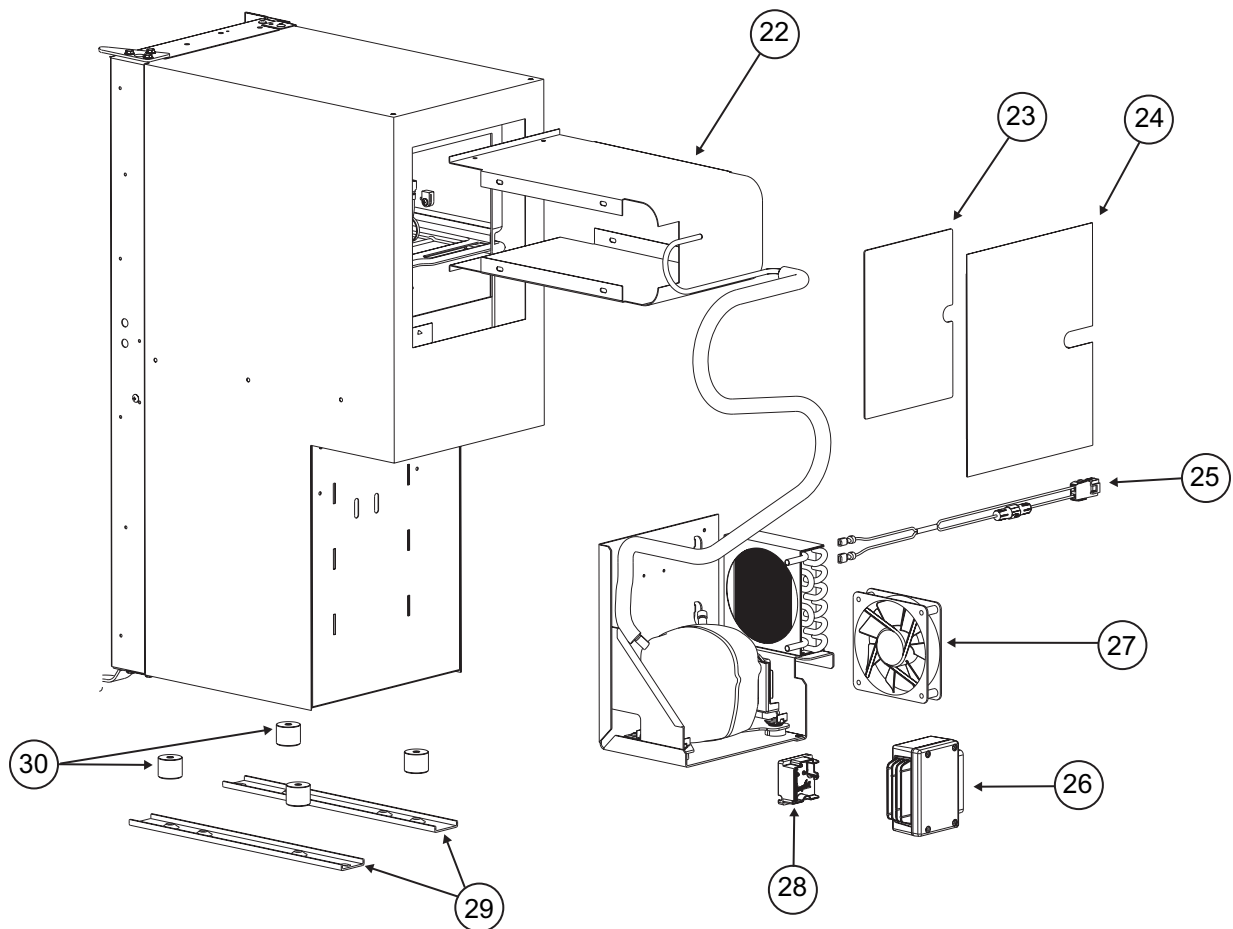

NO	PART #	DESCRIPTION	MODELS
22	634042	COOLING UNIT	ALL
23	633958	PLASTIC SHEET (USE 634872)	ALL
	634872	PLASTIC SHEET	ALL
24	633959	FOAM SYSTEM PLUG	ALL
25	634742	DC LEADS (USE 635347)	ALL
	635347	DC LEADS	ALL
26	634820	CONTROL MODULE (USE 637316)	ALL
	637316	CONTROL MODULE	ALL
27	634664	FAN	ALL
28	634821	CONTROL MODULE MOUNTING KIT	ALL
29	3223 974 1020	SUPPORT-RAIL/BOTTOM	ALL
30	3609 071 0010	SPACER-BOTTOM SUPPORT RAIL	ALL
NS	634373	THERMOSTAT	ALL
NS	634822	COMPRESSOR CONTROL REMOTE CABLE	ALL
NS	634384	THERMOSTAT WIRE W/RESISTOR (USE 635349)	ALL
	635349	THERMOSTAT WIRE	ALL
		PART IS NO LONGER AVAILABLE	

NS = NOT SHOWN